


# Volleyball and Badminton Net | Recommended post installation

## Post location

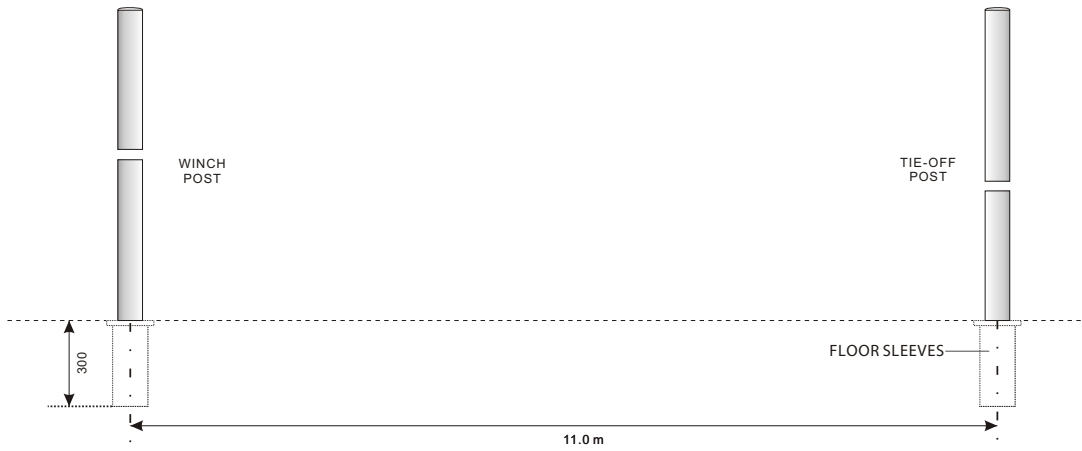

## Floor sleeves

This sleeve must be installed with the top of the sleeve exactly 13mm below the finished floor level. Contact the architect or flooring contractor, if necessary, to determine the total finished floor thickness and the height that the sleeve should extend above (for wooden floors) or below (for synthetic-type floors) the top of the concrete slab.

Sleeves for end uprights should be installed with a 3° tilt, away from the court. Use a digital level to measure the 3° tilt. All sleeves for center uprights must be installed plumb.


The center to center of the sleeves must be held to the dimensions shown in the chart, so the standard game nets can be used.

Existing floors - before coring holes in existing floor slabs, check with the owner, architect or contractor for locations of any electrical wiring, conduit etc that may be concealed in the floor at the sleeve locations. Locate sleeves as required.


### NOTE:

Before beginning sleeve installation, inspect the inside diameter of this sleeve for damage (dents or out-of-round) and check fit over standard upright to ensure proper fit, before allowing to set-up in grout or concrete footing.

## Badminton Court dimensions

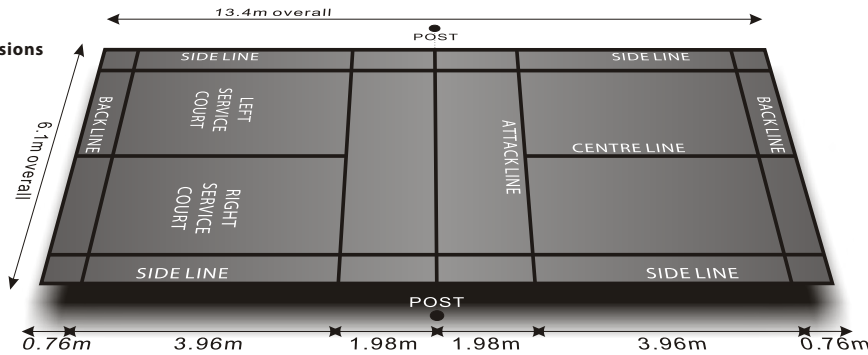

## Volleyball Court dimensions

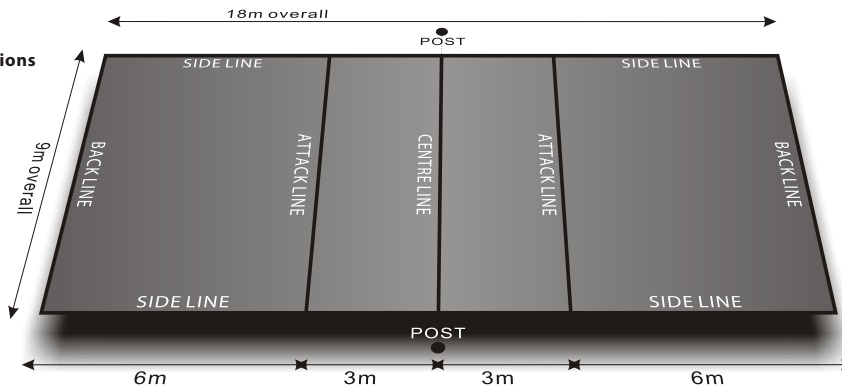

## FLOOR SLEEVES

